


**Assembly instructions
inside**

ALPHA™ Director User Manual

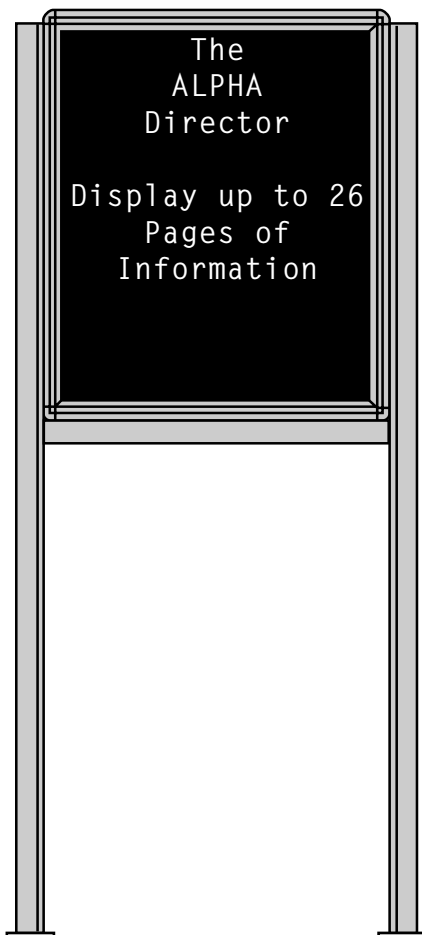

ADAPTIVE

© 1998 Adaptive Micro Systems
Form No. 9704-3006A
8/26/98

NOTE: Due to continuing product innovation, specifications in this document are subject to change without notice.

Copyright © 1998 Adaptive Micro Systems, Inc. All rights reserved.

Trademarked names appear throughout this document. Rather than list the names and entities that own the trademarks or insert a trademark symbol with each mention of the trademarked name, the publisher states that it is using the names for editorial purposes and to the benefit of the trademark owner with no intention of improperly using the trademark.

BETA-BRITE and BIG DOT are trademarks of Adaptive Micro Systems, Inc. registered in the United States Patent and Trademark Office.

Alec, ALPHA, AlphaLert, AlphaNET, AlphaNET plus for Windows, AlphaNET plus II, ALPHAVISION, Automode, Director, EZ KEY II, EZ95, PagerNET, PPD, PrintPak, Smart Alec, Solar, and TimeNet are trademarks of Adaptive Micro Systems, Inc.

Visit us at our World Wide Web site:

<http://www.ams-i.com> or e-mail us at sales@ams-i.com

Contents

Installation and setup	1
Description	1
ALPHA Director technical specifications	2
EMI compliance.....	2
Assembling the ALPHA Director	3
How to mount an ALPHA Director on a wall.....	4
How to mount an ALPHA Director on a stand (without the optional brochure rack)	5
How to mount an ALPHA Director on a stand (with the optional brochure rack)	9
Using the Remote Control	13
Connecting the sign to a computer	15
Updating the sign's firmware (or EPROM).....	17
Basic sign operation	19
Turning a sign on and off	19
Setting a sign's time and date	20
Clearing a sign's memory	22
Setting a sign's password.....	23
What to do when you forget a sign's password.....	24
How to delete a sign's password.....	25
Sound control.....	26
Remote Control sounds	26
Setting a sign's serial address.....	26
Beginning text messaging	28
Example 1 — Using upper and lowercase text.....	28
Example 2 — Displaying messages in PAGE name order (A, B, C, etc.).....	33
Example 3 — Displaying messages in time order	35
Example 4 — Changing the text of an existing message	38
Example 5 — Deleting messages.....	41
Advanced text messaging	42
Example 6 — Displaying the time and date	42
Example 7 — Using the FLASH mode to highlight information	47
Example 8 — Using fonts and colors.....	51
Example 9 — International characters	56
Appendixes	57
Appendix A — Sign diagnostic test	57
Quick Reference Card	58

Warranty

Adaptive Micro Systems, Inc. warrants to the original purchaser that the sign, keyboard and power supply will be free of defects in workmanship and materials for a period of one year from the date of purchase.

Adaptive Micro Systems, Inc. will without charge, repair or replace, at its option, defective product or component parts upon delivery to the factory service department accompanied by proof of the date of purchase in the form of a sales receipt.

This warranty does not apply in the event of any misuse or abuse of the product, or as a result of any unauthorized repairs or alterations. This warranty does not apply if the serial number is altered, defaced or removed from the sign. Incandescent lamps used in incandescent products are not covered by this warranty.

The purchase price of this product does not include, from Adaptive Micro Systems, Inc., any on-site support, service or maintenance.

Local ordinances prohibiting the use of flashing signs may exist in some locations. Compliance with local ordinances is the sole responsibility of the customer.

To obtain warranty coverage, this product must be registered. Please complete the enclosed warranty registration card and mail it to Adaptive Micro Systems, Inc.

How to obtain warranty service

1. Contact the dealer/distributor from whom the sign was purchased. If you do not know where the product was purchased, contact Adaptive Micro Systems Customer Service at 414-357-2020.
2. If the dealer/distributor cannot service the product, obtain a Return Merchandise Authorization (RMA) number through that company. An RMA number is required to obtain warranty service.
3. Fill out the Return Merchandise Authorization (RMA) Form on the following page. To obtain warranty service, this form including the RMA number must accompany the product.
4. Follow return instructions on the RMA form to return to Adaptive Micro Systems, Inc.

Return Merchandise Authorization (RMA) form

RMA Number: _____

Date of Purchase: _____

Company Name: _____

Contact Person: _____

Address: _____

Phone Number: _____

Description of Problem: _____

Return Instructions:

- Step 1: Obtain an RMA number from your dealer/distributor.
- Step 2: Fill out this form and include proof of purchase receipt if product is under warranty.
- Step 3: Pack this form, the sign, keyboard and transformer in the original carton (or a suitable replacement). Please write the RMA number on the outside of the package. Any damage to the product during shipment is the responsibility of the freight company or the owner of the sign.
- Step 4: Ship the package, postage/shipping prepaid to:


Adaptive Micro Systems, Inc.
Attn: RMA No. _____
7840 North 86th Street
Milwaukee, WI 53224

**PLEASE WRITE THE RMA NUMBER ON THE LABEL OF THE SHIPPING BOX -
THANK YOU.**

Installation and setup

The ALPHA Director is an indoor LED sign that can display up to eight, 16-character rows of text. The sign can either be hung from a wall or mounted on a stand. Also, when mounted on a stand, an optional magazine rack can be placed beneath the sign.

Description

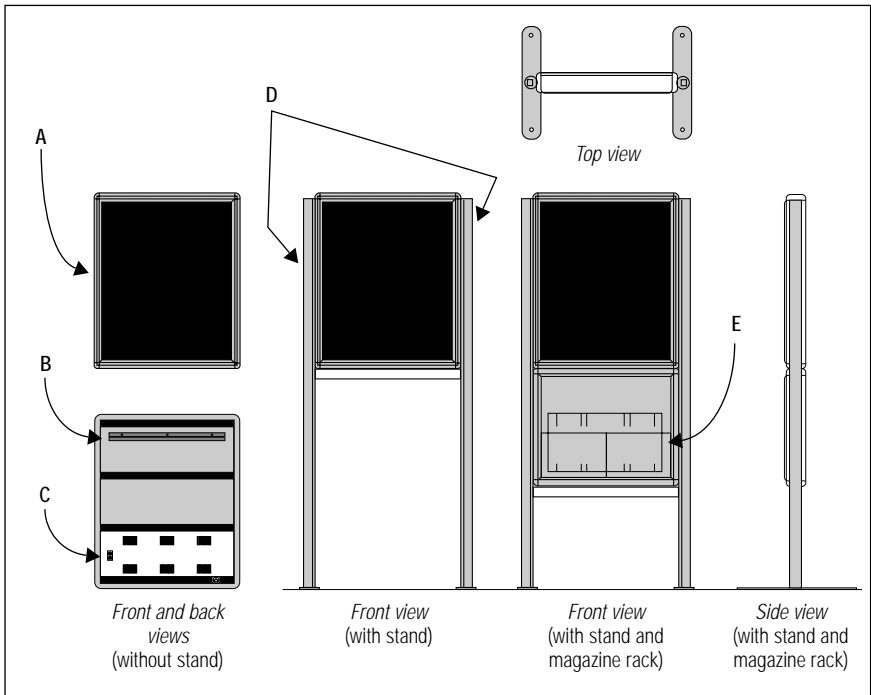

Item	Name	Description
A	ALPHA Director	An LED sign which can display up to eight, 16-character rows of text. The sign is capable of storing up to 26 "pages" or screens of text information.
B	Wall mounting bracket	This is a factory-installed option.
C	RS232/RS485 jacks	The bottom panel flips up to expose the RS232/RS485 jacks which are used to connect the sign to a computer or a network of signs. See the manual Network Configurations (9708-8046) for more information on connecting the sign to a network.
D	Floor mount brackets	This is a factory-installed option.
E	Brochure rack	This is a factory-installed option.



ALPHA Director technical specifications

AMS part number	Description	Input VAC	Input power	Dimensions in inches	Weight in pounds
1022-1111	ALPHA Director	120	150 W	22.5L x 3.12D x 27H (57.2L x 7.9D x 68.6H cm)	31.1 (14.1 kg)
0022-0001	ALPHA Director	230	150 W	22.5L x 3.12D x 27H (57.2L x 7.9D x 68.6H cm)	31.1 (14.1 kg)
Factory-installed options	Brochure rack option	—	—	27L x 18D x 61H (68.6L x 45.7D x 154.9H cm) with brochure rack and stand	58.7 (26.6 kg) with brochure rack and stand
	Wall mounting kit option	—	—		
	Floor stand kit option	—	—		

EMI compliance

This equipment has been tested and found to comply with the limits for a Class A digital Device, pursuant to Part 15 of the FCC Rules. These limits are designated to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Assembling the ALPHA Director

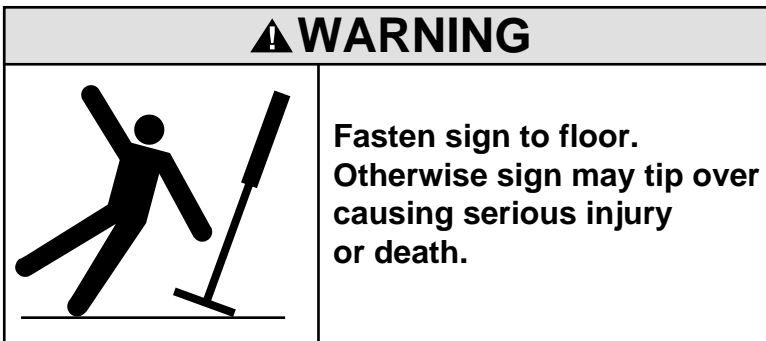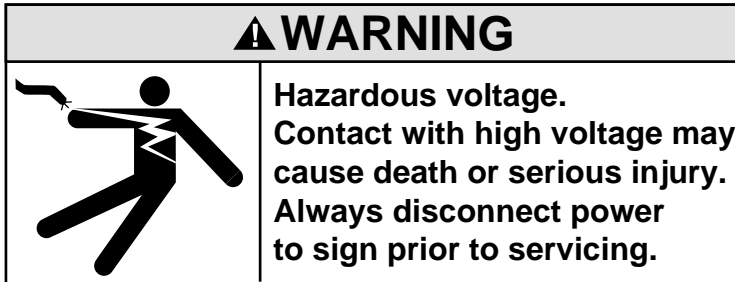


NOTE: Do NOT use the ALPHA Director outdoors because water and dust will damage the sign.

NOTE: Because of its weight, the ALPHA Director should be assembled by two people.


How to mount an ALPHA Director on a wall

1. Make sure a wall mounting bracket is attached to the back of the sign:

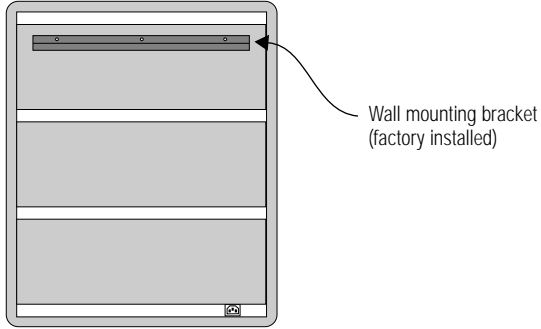

2. Attach the wall mounting bracket (supplied) to a wall. Then hang the sign from this bracket.


NOTE: Only hang the ALPHA Director from a wall capable of supporting 116 pounds (52.5 kg).

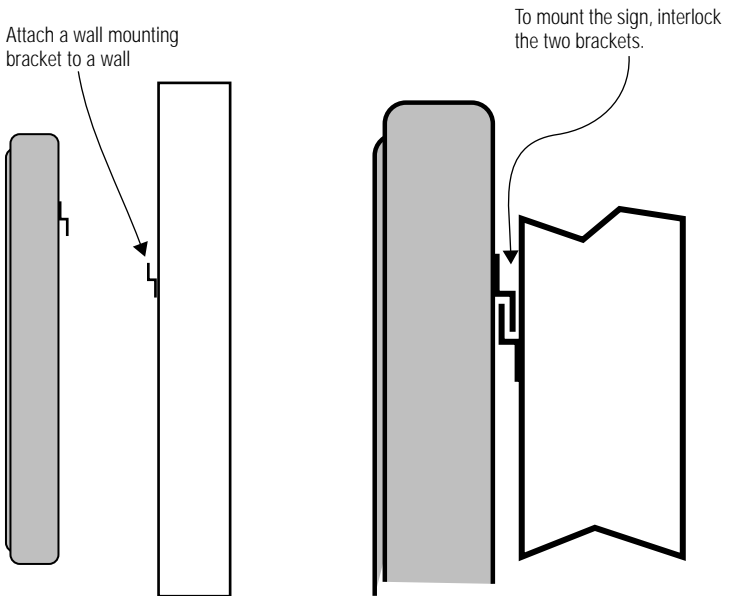


3. Route the power cord from the sign in such a way that the cord is not in an area where people will be walking.

How to mount an ALPHA Director on a stand (without the optional brochure rack)


1. Remove the caps from the top of each mounting pole:

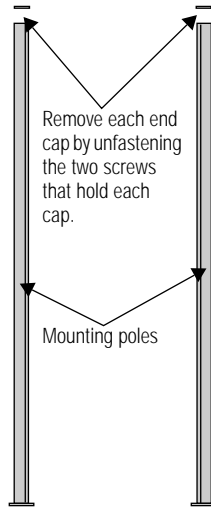

2. Place both mounting poles on a flat surface. Slide the crossbar down the channels on the mounting poles. Then slide a safety stop down each channel:

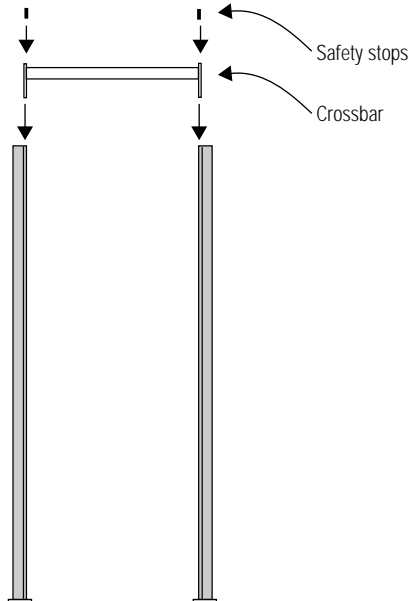


3. Fasten the crossbar to each mounting pole with the four set screws. Then fasten each safety stop with the two sets screws:

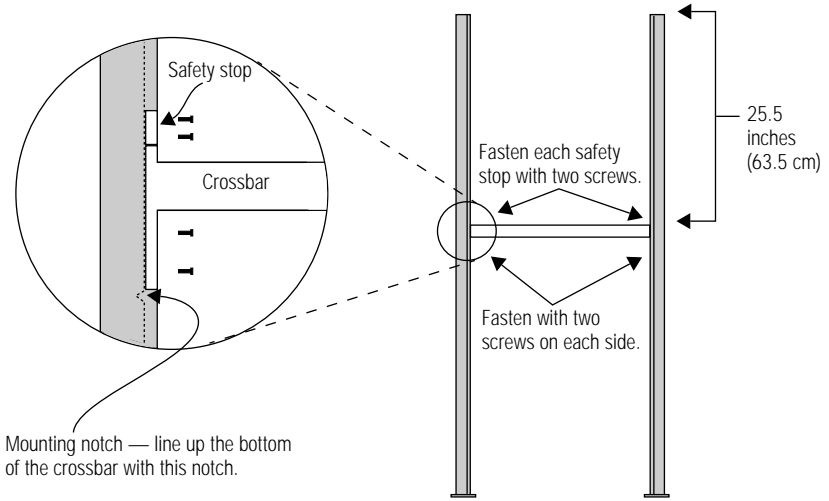


NOTE: Screws should be securely tightened (18 to 20-inch/pounds of torque recommended).

- Place each of the sign's mounting brackets in a channel on each mounting pole. Then slide the sign down until it rests on the safety stops. Finally, re-attach the end caps onto the tops of the mounting poles:

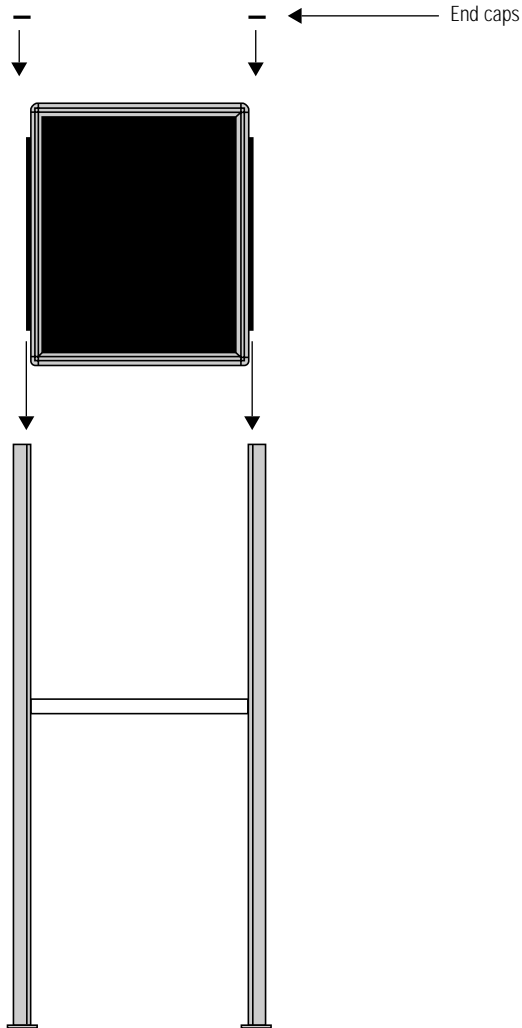

5. Fasten the sign to the floor using four bolts or screws in the locations shown below:

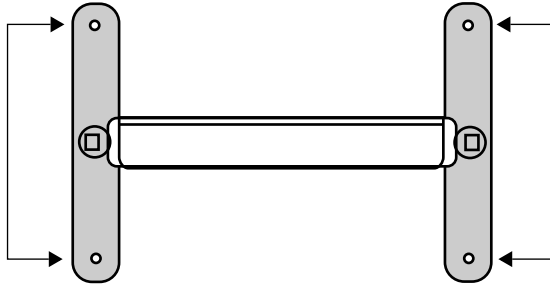


Top view of sign

6. Route the power cord from the sign in such a way that the cord is not in an area where people will be walking.

Run the power cord along one of the mounting poles.

Use the supplied cable ties to fasten the power cord to the mounting pole.


Fasten the power cord to the floor in such a way (e.g., tape) to prevent someone from tripping over the cord.

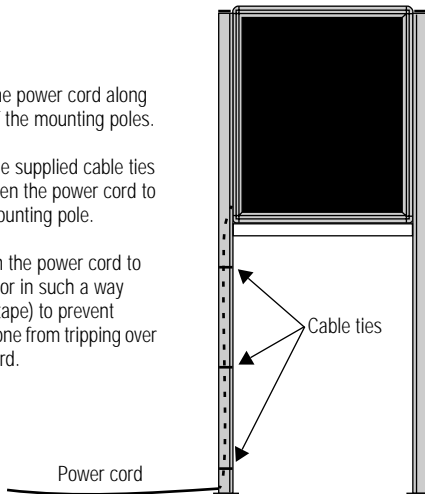


Completed assembly of sign

How to mount an ALPHA Director on a stand (with the optional brochure rack)


1. Remove the caps from the top of each mounting pole:

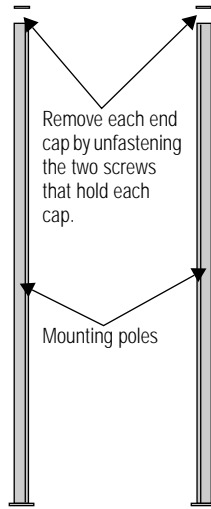

2. Place both mounting poles on a flat surface. Slide the crossbar down the channels on the mounting poles. Then slide a safety stop down each channel:

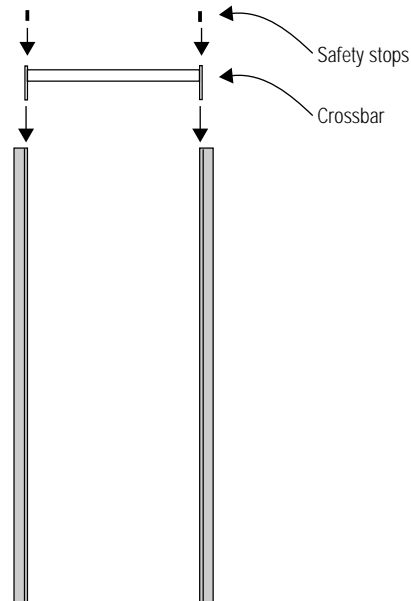


3. Fasten the crossbar to each mounting pole with the four set screws. Then fasten each safety stop with the two sets screws:

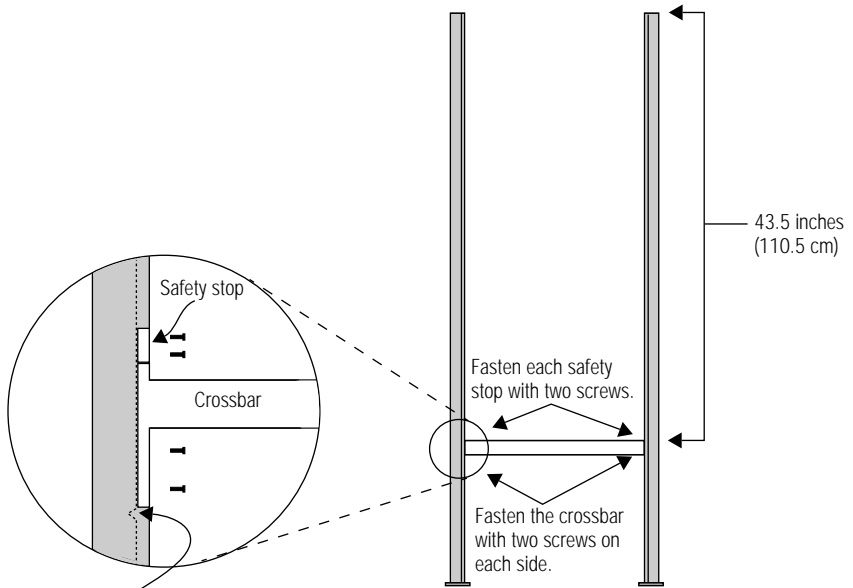


Mounting notch — line up the bottom of the crossbar with this notch.

NOTE: Screws should be securely tightened (18 to 20-inch/pounds of torque recommended).

- Place each of the brochure rack's mounting brackets in a channel on each mounting pole. Slide the brochure rack down until it rests on the safety stops. Then slide the sign down the channels. Finally, re-attach the end caps onto the tops of the mounting poles:

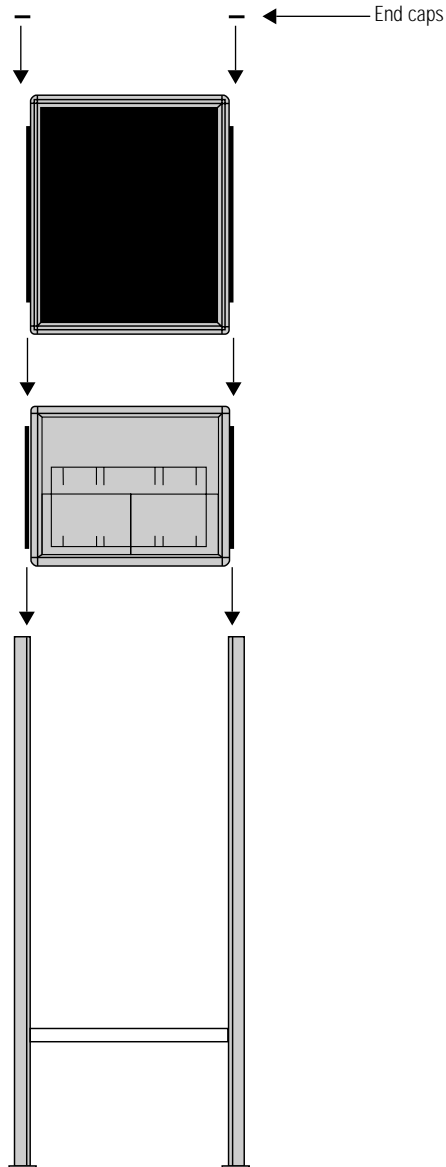


5. Fasten the sign to the floor using four bolts or screws in the locations shown below:

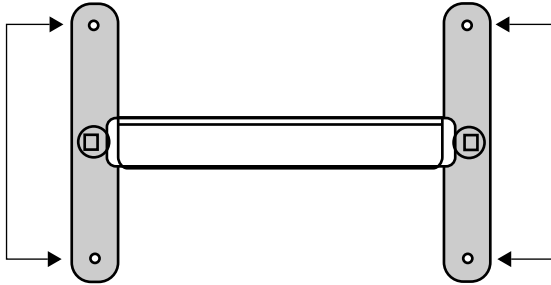

Top view of sign

6. Route the power cord from the sign in such a way that the cord is not in an area where people will be walking.

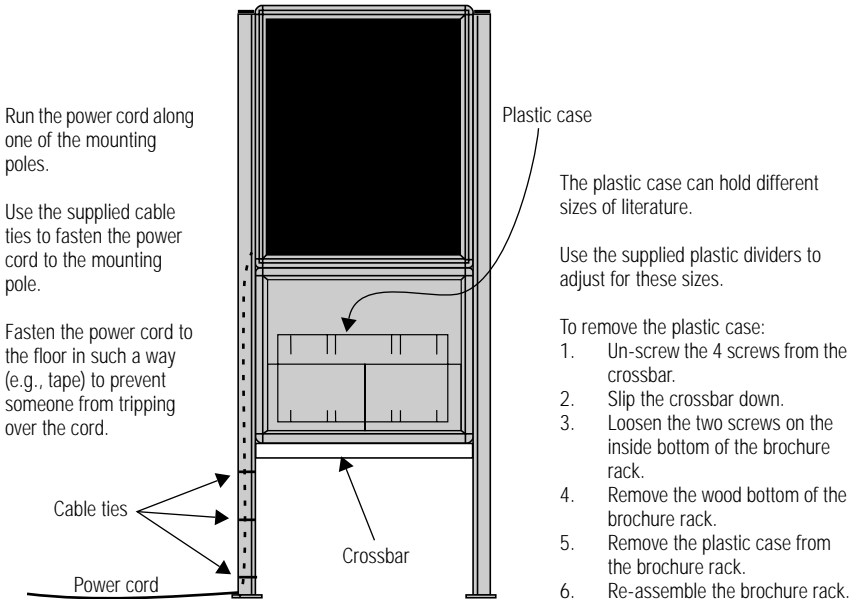

Completed assembly of sign

Using the Remote Control

A Remote Control can be used to turn a sign off and on or to clear its internal memory. Also, a Remote Control can set a sign's time and date and its serial address.

However, a Remote Control's most important—and most used—purpose is the creation of text messages and graphic images on a sign.

To show you how to use a Remote Control, this manual presents practical, everyday examples.

NOTE: A sign (or a network of signs) can also be programmed using a personal computer and special software. (See the document **Network Configurations**, part number 9708-8046, for more detailed information.)

A Remote Control is a hand-held keyboard used to operate an ALPHA sign. From its front, a Remote Control emits infrared light which can control many of the functions of an ALPHA sign.

A Remote Control needs four AAA batteries to operate.


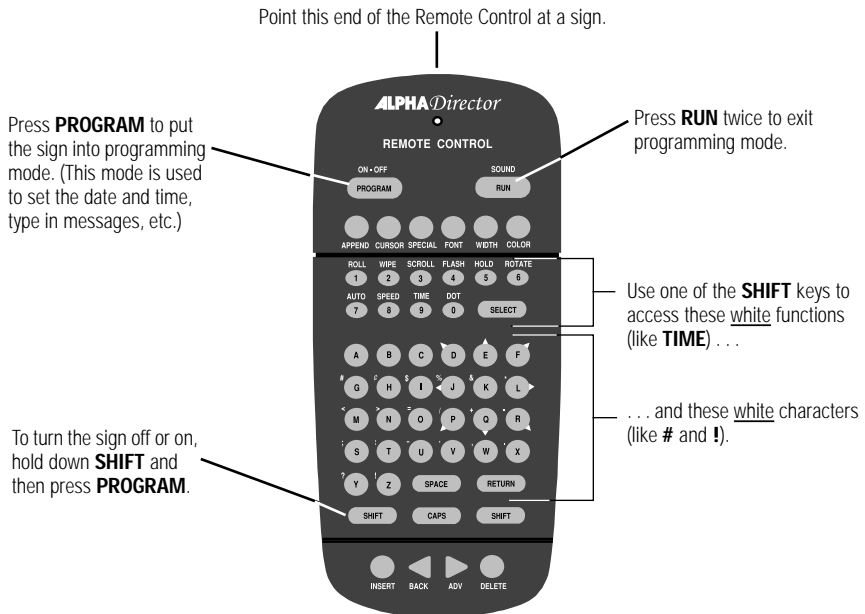


Figure 1: Infrared (IR) Remote Control keyboard

To program a sign with a Remote Control:

- stand at least 5 feet and no more than 30 feet from the sign (see “Using a Remote Control with a sign” on page 14)
- make sure nothing reflective is in front of the sign (Light from the sign’s display that is reflected back can interfere with the Remote Control.)
- if nearby fluorescent lights interfere with the Remote Control, you may have to relocate either the lights or the sign.

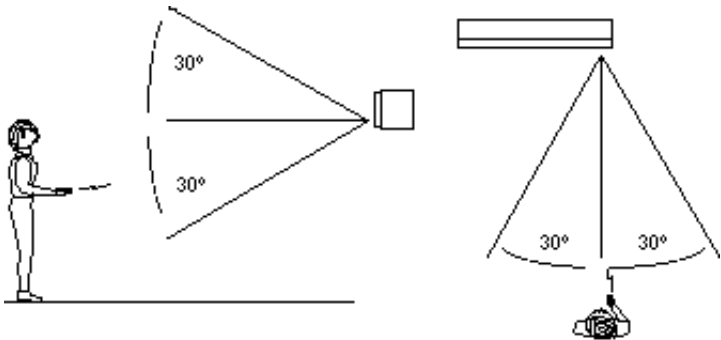

If a sign is this far from the floor...	...then hold a Remote Control this far away:
10 feet	from 10 to 30 feet
15 feet	from 19 to 30 feet
20 feet	from 25 to 30 feet

Figure 2: Using a Remote Control with a sign


Connecting the sign to a computer

Messages are sent to the sign using either the hand-held Remote Control or a computer that is running AlphaNET *plus* software. You can either connect one sign or many types of ALPHA signs.

How to connect one sign directly to a computer


If you only want to connect a single sign to your computer, follow these steps:

1. Remove power from the sign.

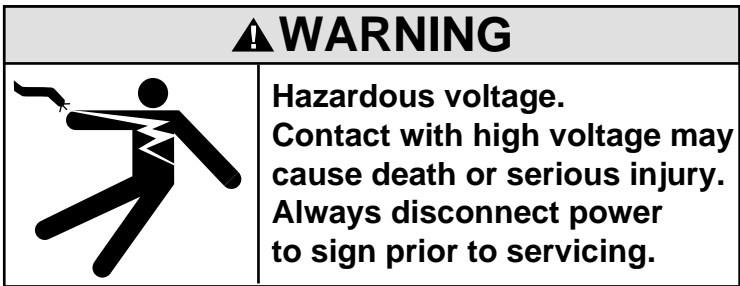


2. Make sure the sign's internal RS232/RS485 jumper is set to RS232 according to this diagram:

1. Remove the two screws holding the sign's cap.

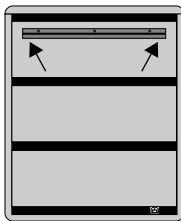

2. Remove the cap.

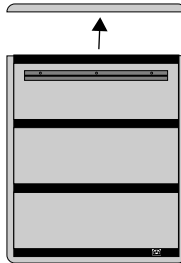

3. Pull up and remove the clear plastic lens on the sign's front. Then set the jumper over the two left (RS232) pins.



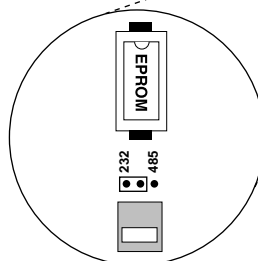


Figure 3: How to change the RS232/RS485 jumper

3. Re-assemble the sign.
4. Connect a personal computer to the sign as follows:

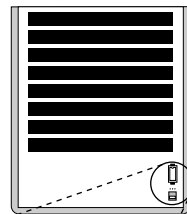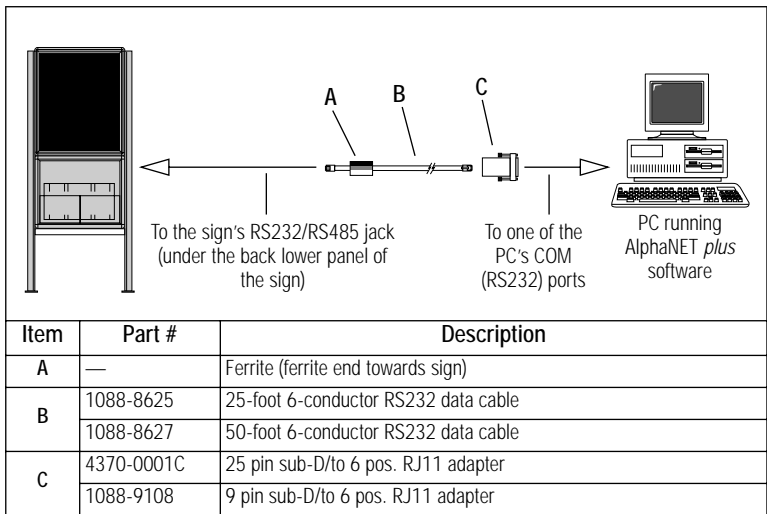

How to connect multiple signs into a network


For this type of networking, the sign's internal RS232/RS485 jumper must be set to **RS485** (see "How to change the RS232/RS485 jumper" on page 15.)

Because there is such a wide variety of ways (e.g., LAN, wireless, etc.) to connect signs, see the manual **Network Configurations** (9708-8046) for more details.

Updating the sign's firmware (or EPROM)

From time to time it may be necessary to update the sign's internal firmware by replacing an EPROM inside the sign. To do this, follow these steps:

1. Remove power from the sign.

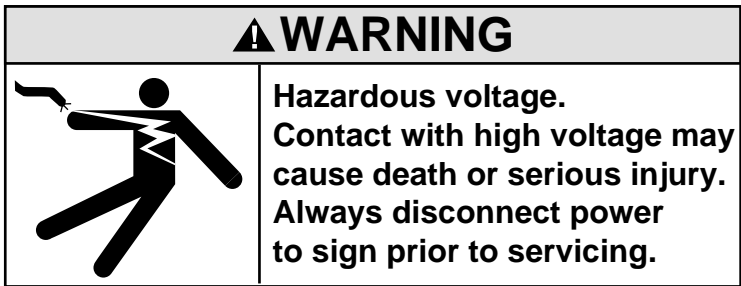

2. Replace the sign's internal EPROM according to this diagram:

1. Remove the two screws holding the sign's cap.
2. Remove the cap.
3. Pull up and remove the clear plastic lens on the sign's front.

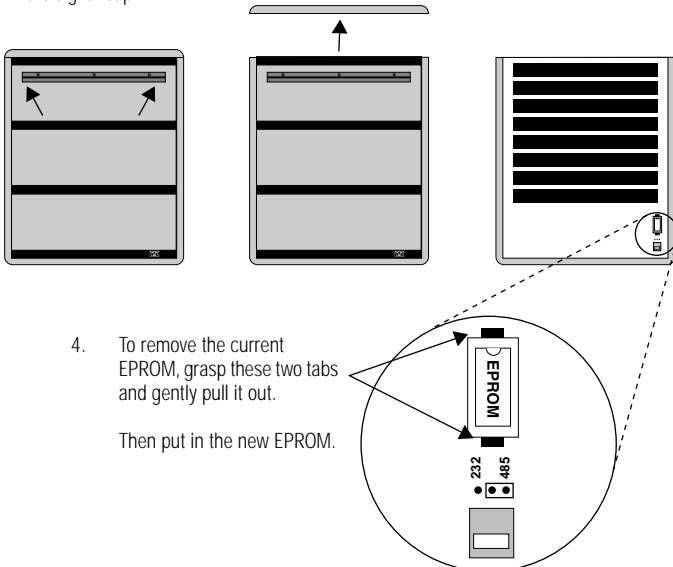


Figure 4: How to change the sign's EPROM

3. Re-assemble the sign.

Basic sign operation

Turning a sign on and off


When you plug in the sign's power supply, the sign starts up automatically, and unplugging the power supply turns the sign off.

However, instead of unplugging a sign, there are two other ways to turn a sign off:

*Holding down **SHIFT** and then pressing **PROGRAM** turns a sign off and on.*





NOTE: Messages that you have programmed into the sign will *not* be lost when you turn a sign off. Messages will be retained for up to 30 days if the sign is not powered.

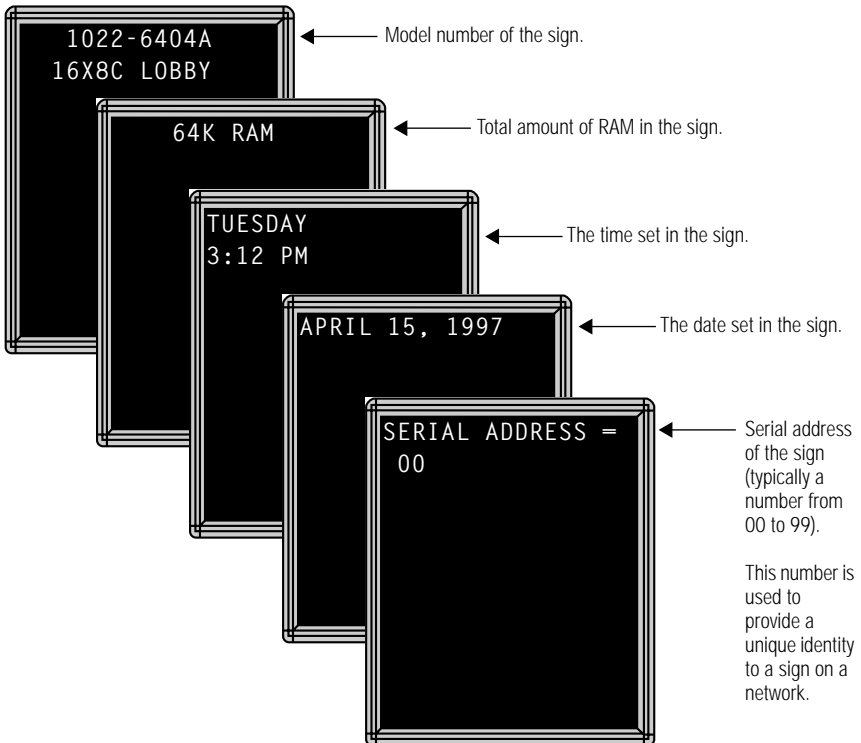


 

When you turn a sign on, information similar to the following will be displayed:

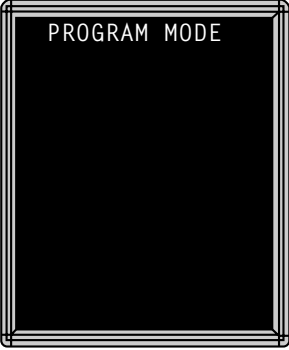

Setting a sign's time and date


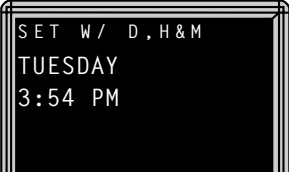


 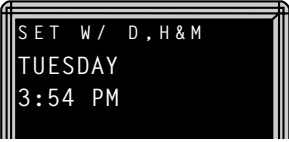
Once set, a sign will remember the time and date unless the sign is unplugged or interrupted by a power loss. However, models equipped with battery-backed clocks will continue to keep accurate time.

Step	When you do this...	You see this...
1	Press PROGRAM .	 <p style="text-align: center;">PROGRAM MODE</p> <p style="text-align: center;">THEN</p>  <p style="text-align: center;">PAGE A MODE: [AUT] SPEED: [SP4]</p>
2	Press BACK until SET TIME AND DAY appears.	 <p style="text-align: center;">SET TIME AND DAY</p>
3	Press ADV .	 <p style="text-align: center;">SET W/ D, H&M TUESDAY 3:54 PM</p>

<p>4</p>	<p>Press D to set the day of the week. Press H to set the hour. Press M to set the minute.</p> <p>NOTE: Press SELECT, to change from 12-hour (AM/PM) to 24-hour mode (0 - 23).</p>	
<p>5</p>	<p>Press BACK until SET DATE appears.</p>	
<p>6</p>	<p>Press ADV.</p>	 <p>THEN</p> 
<p>7</p>	<p>Press D to set the correct day. Press M to set the month. Press Y to set the year.</p> <p>NOTE: Press SELECT to display the date in different formats—for example, JAN 26, 1994 or 1/26/94, or 26/1/96, etc.</p>	
<p>8</p>	<p>After setting the date and time, press RUN twice to return to normal operation.</p>	

Clearing a sign's memory

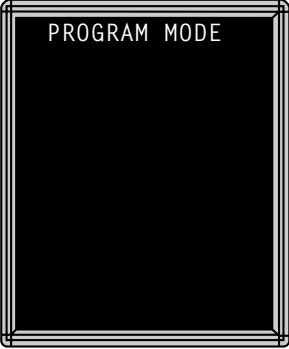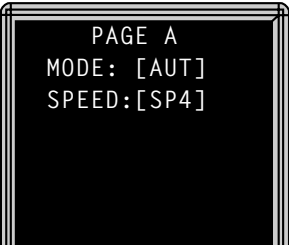NOTE: Clearing a sign's memory erases all messages and the password that have been programmed into the sign.






Step	When you do this...	You see this...
1	Press PROGRAM .	 <p style="text-align: center;">PROGRAM MODE</p> <p style="text-align: center;">THEN</p>  <p style="text-align: center;">PAGE A MODE: [AUT] SPEED: [SP4]</p>
2	Press BACK until CLEAR MEMORY appears.	 <p style="text-align: center;">CLEAR MEMORY</p>
3	Press ADV .	 <p style="text-align: center;">WARNING *****</p> <p style="text-align: center;">THEN</p>  <p style="text-align: center;">CLEAR ALL? Y/N</p>
4	Press Y to clear the sign's memory. The sign will return to normal operation and display a series of demo messages.	




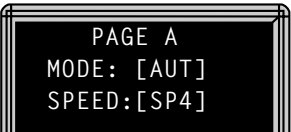


Setting a sign's password

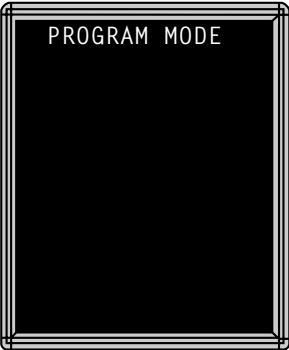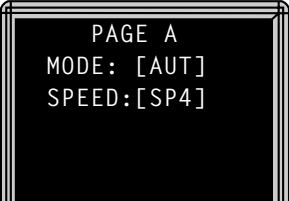Some signs allow you to set a personal password to protect your messages from tampering by others.


NOTE: DON'T FORGET YOUR PASSWORD! If you do, you won't be able to operate the sign.


However, *if you do forget the password*, see "What to do when you forget a sign's password" on page 24.

Step	When you do this...	You see this...
1	Press PROGRAM .	 <p>PROGRAM MODE</p> <p>THEN</p>  <p>PAGE A MODE: [AUT] SPEED: [SP4]</p>
2	Press BACK until SET PASSWORD appears.	 <p>SET PASSWORD</p>
3	Press ADV .	 <p>PASSWD Y/N</p>
4	Press Y to set a password.	 <p>ENTER 6 CHAR</p>

<p>5</p>	<p>Type a 6-character password. (Only asterisks will appear on the sign as you type.)</p> <p>Re-type the password when prompted.</p> <p>CORRECT will appear if you entered the same password.</p> <p>If you failed to type the same password, ERROR will appear, and you'll have to start over from Step 1.</p>	 <p>THEN</p>  <p>THEN</p>  <p>THEN</p> 
<p>6</p>	<p>Press RUN twice.</p>	
<p>7</p>	<p>Press Y to password protect the sign.</p> <p>NOTE: If you select N, then a password will not be needed when you press PROGRAM.</p>	 <p>THEN</p> <p>The sign will return to normal operation.</p> <p>Now, whenever you press PROGRAM, you'll have to type the password you just entered.</p>

What to do when you forget a sign's password

Step	When you do this...	You see this...
<p>1</p>	<p>Press PROGRAM.</p>	

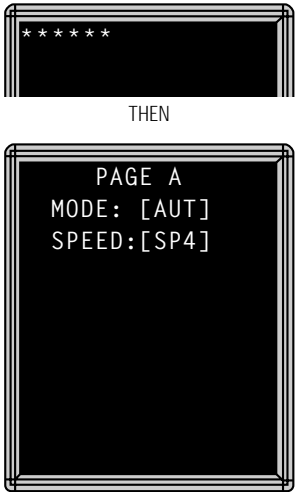2	Hold down SHIFT and press L six times.	 <p>*****</p> <p>THEN</p> <p>PAGE A MODE: [AUT] SPEED: [SP4]</p>
3	Enter a new password. (See "Setting a sign's password" on page 23.)	

How to delete a sign's password

If you no longer want to be prompted to password protect a sign, you must clear the sign's memory in order to delete the password. To do this, see "Clearing a sign's memory" on page 22.

Sound control

Remote Control sounds



On some signs, whenever you press a Remote Control key, the sign will beep. To turn this feature off (or on again), hold down **SHIFT** and press **RUN**.




NOTE: On some signs, you will first have to press **PROGRAM**, then hold down **SHIFT** and press **RUN**.

Setting a sign's serial address

The serial address is a number that you can assign to a sign. Typically, this feature would be used for a sign that is connected to other signs on a network. Giving a unique serial address to a sign allows you to send messages to that *particular* sign.

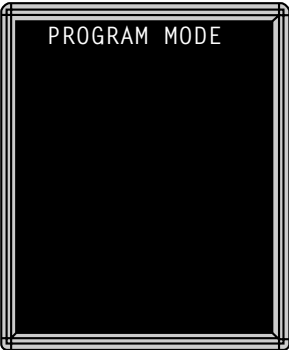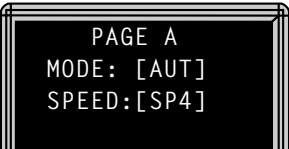See the document **Network Configurations** (part number 9708-8046) for more detailed information on networking signs.

Step	When you do this...	You see this...
1	Press PROGRAM .	<div style="text-align: center;">  <p>PROGRAM MODE</p> <p>THEN</p>  <p>PAGE A MODE: [AUT] SPEED: [SP4]</p> </div>

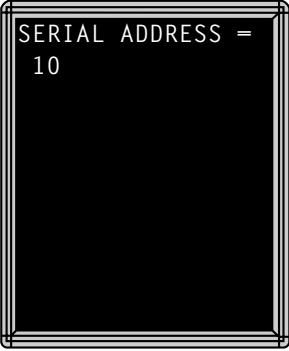
2	Press BACK until SET SERIAL ADDRESS appears.	
3	Press ADV .	
4	<p>Type a number, like 10.</p> <p>NOTE: A serial address is actually a number from 0 to 255 in <i>hexadecimal</i> (00 to FF). However, in typical use entering a number from 00 to 99 is fine.</p> <p>NOTE: When a sign leaves the factory, its serial address is set to 00.</p>	
5	Press RUN twice to set the new serial address and return the sign to normal operation.	



Beginning text messaging




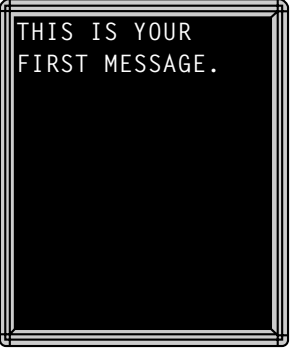
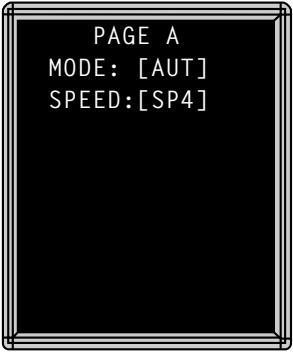
This section shows you how to start creating messages on your sign.


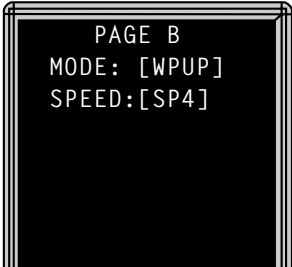


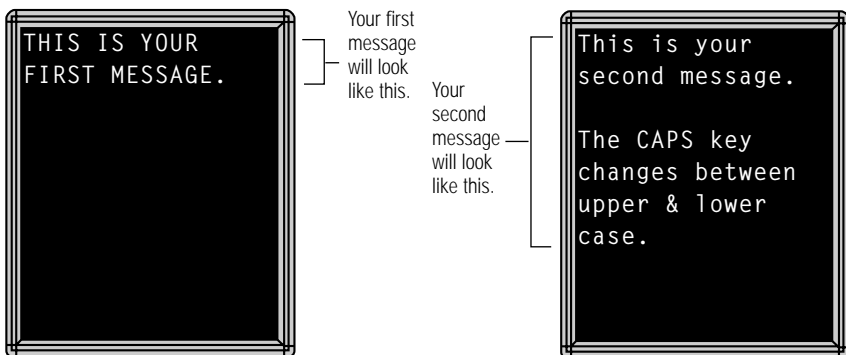
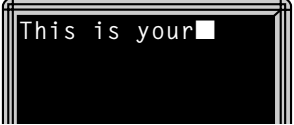
Example 1 — Using upper and lowercase text

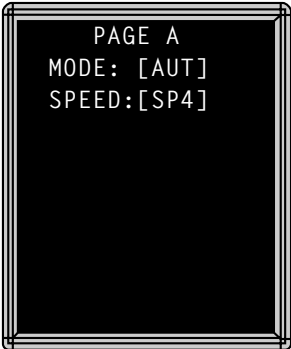





In this first example, you'll display the following text on the sign:






Step	When you do this...	You see this...
1	Press PROGRAM .	<p>MODE allows you to use a special effect, like flashing, on a message. In this case, Automode [AUT] is used. To change MODE, hold down SHIFT and press either 2 (WIPE), 4 (FLASH), 5 (HOLD), or 7 (AUTO).</p> <p>SPEED controls how fast a mode changes. To change SPEED, hold down SHIFT and press 8. [SP5] is the fastest speed and [SP1] is the slowest. [NHL] means "no hold".</p> 
2	Press ADV .	<p>Blinking cursor</p> 

3	<p>Type <i>THIS IS YOUR</i></p> <p>NOTE: If you make a mistake while typing, press BACK to erase a letter.</p>	
4	<p>Press RETURN to start on the next line.</p>	
5	<p>Type <i>FIRST MESSAGE.</i></p> <p>NOTE: To create the period (.), hold down SHIFT and press X.</p>	
6	<p>Press RUN to display your first message.</p>	<p>Because Automode [AUT] was used, the message will appear in different colors.</p> 
Here's how to create the second message:		
7	<p>Press PROGRAM.</p>	

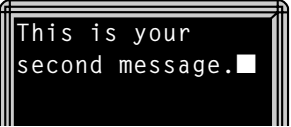
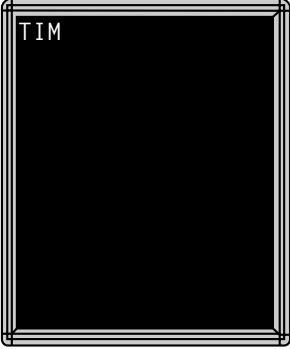

<p>8</p>	<p>Press B to switch to PAGE B.</p>	<p>Your second message will be created in PAGE B. →</p> <p>(Your <i>first</i> message is still in PAGE A. You can create up to 26 separate messages using pages A through Z.)</p> 
<p>9</p>	<p>Hold down SHIFT and then press 2 for WIPE.</p>	 <p>← WPUP = wipe up.</p> <p>If you hold down SHIFT and press 2 again, the MODE would change to WPDN (wipe down). You can also select wipe left and wipe right.</p>
<p>10</p>	<p>Press ADV</p>	
<p>11</p>	<p>Press the round COLOR key until the cursor color stays green.</p>	
<p>12</p>	<p>Type <i>T</i></p>	
<p>13</p>	<p>Press CAPS to change to lowercase text.</p> <p>Then type <i>his is your</i></p>	<p>All these characters in this line should be <u>green</u>. →</p> 

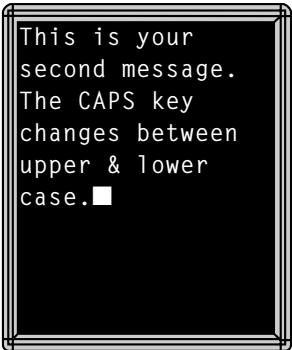
14	Press RETURN to go to the next line.	
15	Press the round COLOR key until the cursor color stays red.	
16	Type <i>second message</i> .	<p>All these characters in this line should be <u>red</u>.</p> 
17	Press RETURN to go to the next line.	
18	Press the round COLOR key until the cursor color stays amber.	
19	<p>Using CAPS, SHIFT, and RETURN when necessary, type the following: <i>The CAPS key changes between upper & lower case.</i></p> <p>NOTE: The ampersand (&) is made by holding down SHIFT and pressing K.</p>	<p>All these characters in these lines should be <u>amber</u>.</p> 
Here's how to insert a blank line between the two sentences above:		
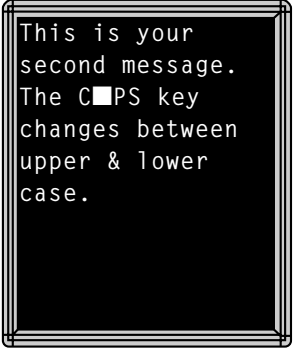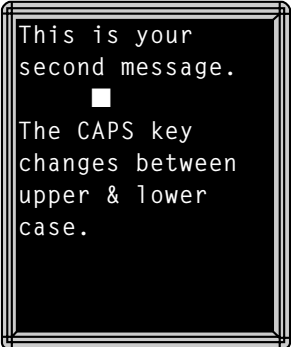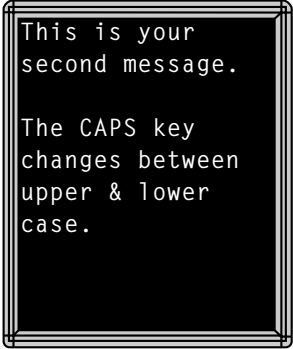
<p>20</p>	<p>Hold down SHIFT and press E to move the cursor up one line.</p> <p>Repeat this until the cursor is over the A in CAPS.</p>	
<p>21</p>	<p>Press INSERT to create a blank line.</p>	<p>Use INSERT to create blank lines between text. →</p> <p>(Use DELETE to remove blank lines.)</p> 
<p>22</p>	<p>Press RUN to see the message.</p>	<p>Notice that only the second message (PAGE B) is displayed.</p> <p>In the next example, you'll see how to display multiple messages instead of just one.</p> 

Example 2 — Displaying messages in PAGE name order (A, B, C, etc.)

Once you've programmed messages into the sign, you may want to set the order or sequence in which messages appear. This method will display messages by their PAGE name (A, B, C, etc.) or in alphabetical order.

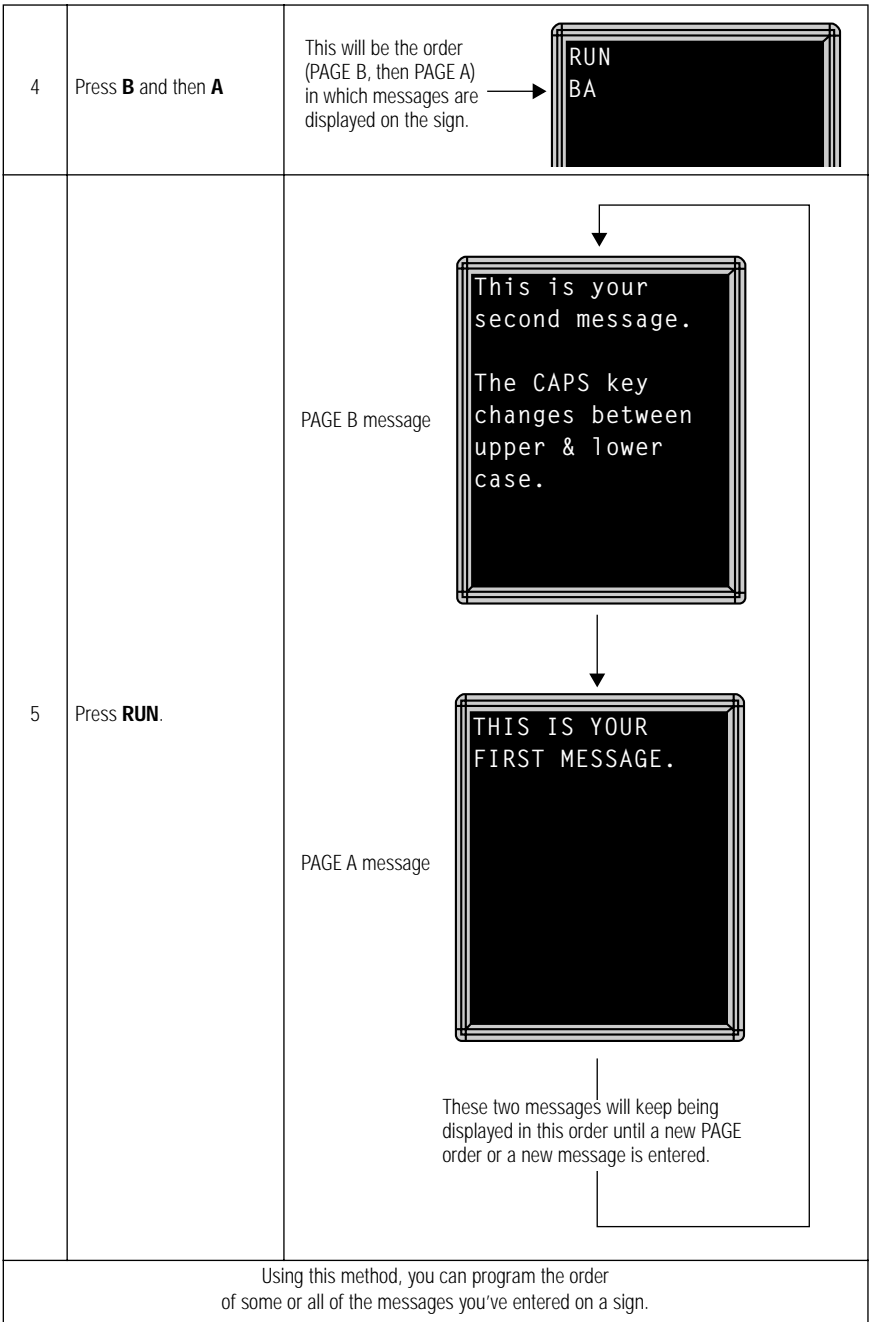

Step	When you do this...	You see this...
<p>This example continues where Example 1 left off. This example assumes that there are two messages (PAGE A and B) in the sign.</p>		
1	Press PROGRAM .	<p>Since we're continuing from Example 1, this would appear on the sign.</p> 
2	Press RUN .	<p>DEMO or RUN may also appear here. →</p> <p>TIM</p> <p>TIM = used to display messages in time order DEMO = displays a set of demonstration messages. RUN = used to display messages by PAGE order (A, B, C, etc.)</p> 
3	<p>If <i>RUN</i> appears on the sign, go to the next step.</p> <p>Otherwise, press SELECT until <i>RUN</i> appears.</p>	





 
 
 


Example 3 — Displaying messages in time order

In Example 2, you set the order of messages by PAGE letter (A, B, C, etc.). However, that method could not specify an exact time when a message would appear.

In this example, we'll show you how to make a message appear and disappear at times you specify.

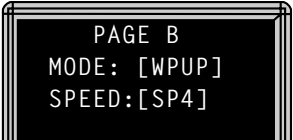Step	When you do this...	You see this...
<p>For this example, make sure that your sign's internal clock has been accurately set. (See "Setting a sign's time and date" on page 20.)</p> <p>This example continues where Example 1 left off. This example assumes that there are two messages (PAGE A and B) in the sign.</p> <p>In this example, we'll program the sign to display the message in PAGE A on Monday through Friday from 1:20 PM to 1:30 PM. We'll program the sign to always display the message in PAGE B.</p>		
1	<p>Press PROGRAM.</p> <p>(If PAGE B does not appear, press B to display it.)</p>	<p>Since we're continuing from Example 1, this would appear on the sign.</p> 
2	<p>Hold down SHIFT and press 9 for TIME.</p>	<p><i>ON ALWAYS</i> is the default setting for a message. A message set to <i>ON ALWAYS</i> will run continuously.</p>  <p>Since PAGE B is already set up, we'll go on to PAGE A.</p>







3	<p>Press RUN twice. Then press PROGRAM.</p>	
4	<p>Press A.</p>	
5	<p>Hold down SHIFT and press 9 for TIME.</p>	
<p>First we'll set the ON time — or when this message will start on the sign:</p>		
6	<p>Press D (for day) until <i>MO-FR</i> appears.</p>	 <p>Press D to set the day, H for hour, and M for minute (in 10-minute increments).</p>
7	<p>Press H (for hour) until <i>13:00</i> appears.</p>	 <p>Hours must be represented in 24-hour or military style. So 1:00 PM = 13:00, 2:00 PM = 14:00, etc.</p>
8	<p>Press M (for minute) until <i>13:20</i> appears.</p>	 <p>Minutes are in increments of 10.</p>
9	<p>Press SELECT.</p>	 <p>After setting the ON time, we'll select the <i>OFF</i> time or when the message <u>stops</u>.</p>
10	<p>Repeat Steps 6, 7, and 8 to set an <i>OFF</i> time (in this case, 13:30)</p>	


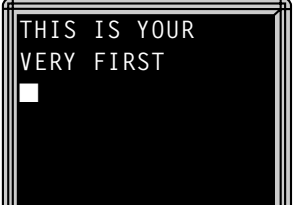
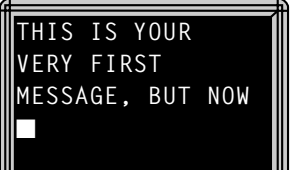
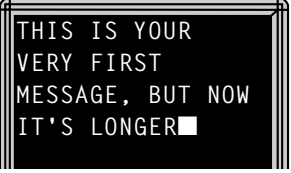
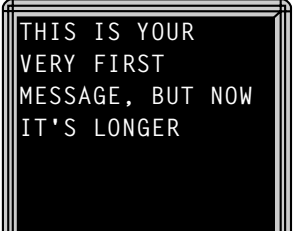
<p>11</p>	<p>Press RUN twice.</p>	<p>This message should appear continuously. — PAGE B</p> <p>This message should only appear <u>between</u> the <i>ON</i> and <i>OFF</i> times you set. — PAGE A</p>
-----------	--------------------------------	---

Example 4 — Changing the text of an existing message

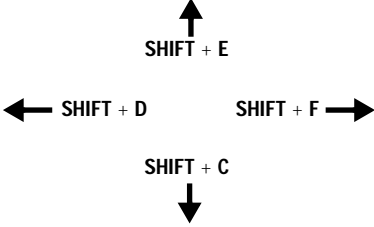After typing in a message, you may want to add or remove text from it. The following is an example of this common situation:

Step	When you do this...	You see this...
<p>This example continues where Example 2 left off.</p> <p>This example assumes that there are two messages (PAGE A and B) in the sign.</p> <p>In this example, we'll change PAGE A to the following: <i>THIS IS YOUR VERY FIRST MESSAGE, BUT NOW IT'S LONGER</i></p>		
1	Press PROGRAM .	
2	Press RUN . Press SELECT until RUN appears. Press A and then B to set a run sequence. Finally, press RUN again.	
3	Press PROGRAM . (If PAGE A is not displayed, press A .)	
4	Press ADV .	<p>The cursor should be blinking above the first letter.</p>





<p>5</p>	<p>Hold down SHIFT and press C to move the cursor down one line.</p>	<p>How to move the cursor:</p> <p style="text-align: center;">  </p> <p>The cursor should be blinking above the first letter on the <i>second line</i>.</p> 
<p>6</p>	<p>Try to type the word <i>VERY</i></p>	<p>You'll only be allowed to type the first two letters of <i>VERY</i>, because there must be enough room in a line to add the characters.</p> 
<p>7</p>	<p>In order to make room for the word <i>VERY</i>, you'll have to delete the word <i>MESSAGE</i> first.</p> <p>Move the cursor to the end of the word <i>FIRST</i> by holding down SHIFT and then pressing F.</p>	
<p>8</p>	<p>Press DELETE until the word <i>MESSAGE</i> (and the period) is deleted.</p>	
<p>9</p>	<p>Hold down SHIFT and press D to move the cursor over the letter <i>F</i>.</p>	

10	Finish the word <i>VERY</i> by typing <i>RY</i> and a space.	
11	Hold down SHIFT and press C to move down one line. Then hold down SHIFT and press D until the cursor is at the start of the line.	
12	Type <i>MESSAGE, BUT NOW</i>	The cursor moves to the next line automatically. 
13	Type <i>IT'S LONGER</i>	Use SHIFT + W to create a comma. Use SHIFT + V to create an apostrophe. 
14	Press RUN to see your message.	

Example 5 — Deleting messages

To delete all the messages in a sign, see “Clearing a sign’s memory” on page 22.


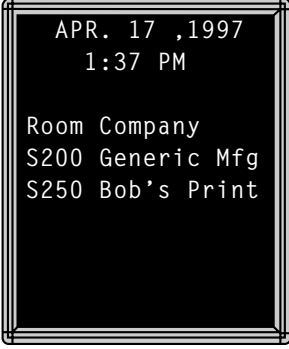
However, if you only want to delete selected messages, then use the method shown in this example.

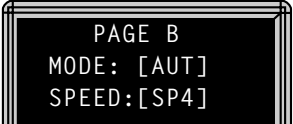
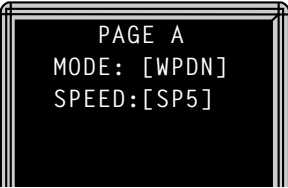

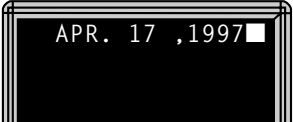

Step	When you do this...	You see this...
<p>This example continues where Example 4 left off.</p> <p>This example assumes that there are two messages (PAGE A and B) in the sign: PAGE A = <i>THIS IS YOUR VERY FIRST MESSAGE, BUT NOW IT'S LONGER</i> PAGE B = <i>This is your second message. The CAPS key changes between upper & lower case.</i></p> <p>In this example, we'll delete the PAGE B message:</p>		
1	Press PROGRAM . (If PAGE B is not displayed, then press B .)	
2	Press DELETE .	
3	Press Y to delete the page.	
4	Press RUN twice.	<p>Only the PAGE A message should appear.</p> 




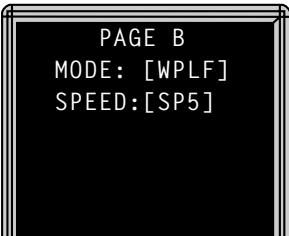
Advanced text messaging





Before attempting the following, make sure you're familiar with the previous examples in the "Beginning text messaging" section of this manual.


Example 6 — Displaying the time and date

Step	When you do this...	You see this...
<p>In this example, we'll create a message that continuously displays the current time and date:</p>		
	<p>Current date and time (displayed in <i>amber</i>)</p> <p>This will be displayed in <i>red</i>.</p> <p>This will be displayed in <i>green</i>.</p>	 <p style="text-align: center;"> PAGE A (The <i>first</i> message you'll enter.) </p>
	<p>Current date and time (displayed in <i>amber</i>)</p> <p>This will be displayed in <i>red</i>.</p> <p>This will be displayed in <i>green</i>.</p>	 <p style="text-align: center;"> PAGE B (The <i>second</i> message you'll enter.) </p>
<p>1</p>	<p>Delete all the messages currently stored in the sign. (See "Clearing a sign's memory" on page 22 or "Example 5 — Deleting messages" on page 41.)</p>	

2	<p>Press PROGRAM.</p> <p>(If PAGE A is not displayed, just press A.)</p>	
3	<p>Change the MODE to Wipe Down.</p> <p>Set the message transition speed to its fastest — SP5.</p>	 <p>← Use SHIFT + 2 to change the MODE.</p> <p>← Use SHIFT + 8 to change the SPEED.</p>
4	<p>Press ADV.</p> <p>Press COLOR until the cursor always blinks <u>amber</u>.</p> <p>Then press SPACE to move the cursor over two spaces.</p>	
Here's how to put the <i>date</i> in the message:		
5	<p>Hold down SHIFT and press 0.</p>	
6	<p>Press RETURN to start on a new line.</p> <p>Press COLOR until the cursor always blinks <u>amber</u>.</p> <p>Then press SPACE four time to move the cursor over.</p>	
Here's how to put the <i>time</i> in a message:		

<p>7</p>	<p>Hold down SHIFT and press 9.</p>	
<p>Now enter the rest of the PAGE A message:</p>		
<p>8</p>	<p>Press RETURN twice to skip down two lines.</p> <p>Press COLOR until the cursor always blinks <u>red</u>.</p> <p>Using CAPS when necessary, type <i>Room</i>, a space, and then <i>Company</i></p>	
<p>9</p>	<p>Press RETURN again to start on a new line.</p> <p>Press COLOR until the cursor always blinks <u>green</u>.</p> <p>Using CAPS when necessary, type <i>E101</i>, a space, and then <i>Applied Eng</i>.</p> <p>Repeat this process for the remaining lines of text.</p>	
<p>10</p>	<p>Press PROGRAM.</p> <p>Press B to go to PAGE B.</p> <p>Change the MODE to Wipe Left [WPLF].</p> <p>Change the SPEED to the fastest [SP5].</p>	 <p>Use SHIFT + 2 to change the MODE.</p> <p>Use SHIFT + 8 to change the SPEED.</p>

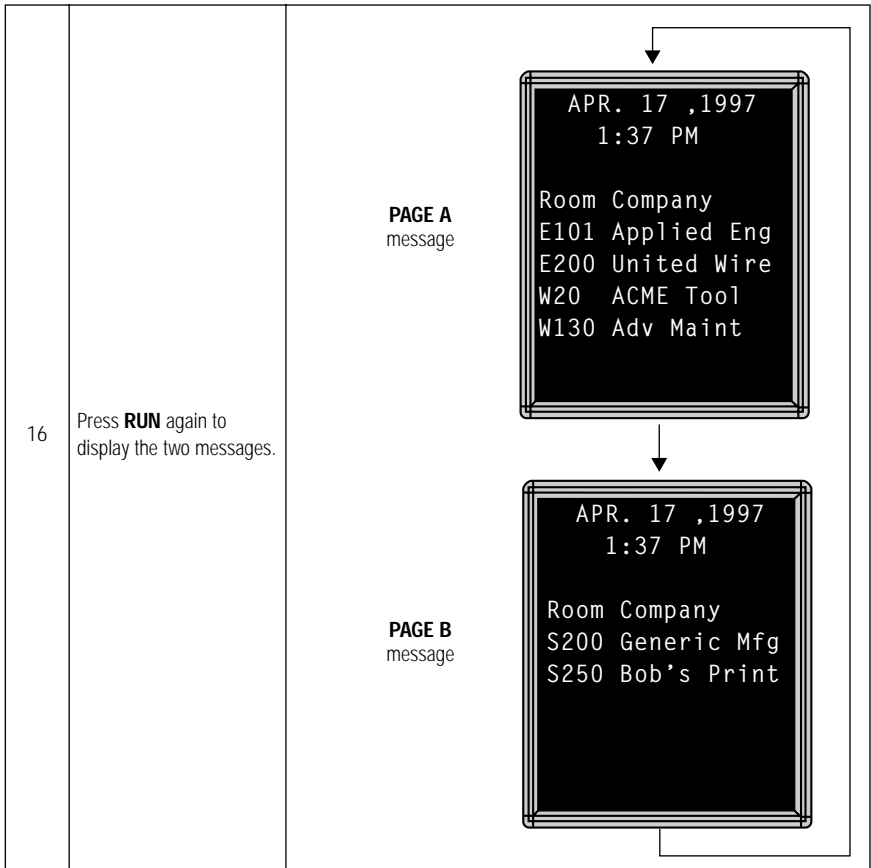


11	Press ADV .	
12	Using what you've just learned, enter the PAGE B message as shown:	<div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"> <p>Current date and time (displayed in <i>amber</i>)</p> <p>This should be in <i>red</i>.</p> <p>This should be in <i>green</i>.</p> </div> <div style="border: 1px solid black; padding: 5px;"> <pre> APR. 17 ,1997 1:37 PM Room Company S200 Generic Mfg S250 Bob's Print </pre> </div> </div>
13	Press RUN .	
14	Press SELECT until RUN appears.	
15	Type A and then B to set the order in which the two messages will appear.	







Example 7 — Using the FLASH mode to highlight information

FLASH is a mode that you shouldn't overuse. However, it is very handy if you want to call attention to a single item, like a time or room number, on a page:

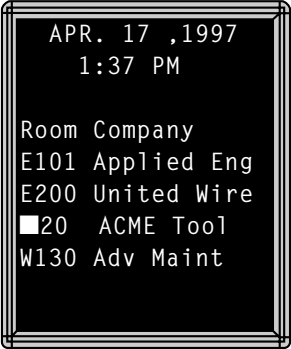Step	When you do this...	You see this...										
<p>In this example, we'll continue from the previous example:</p> <div style="display: flex; align-items: center;"> <div style="flex: 1;"> <p>To call attention to this room number, we'll make it flash on and off.</p> </div> <div style="flex: 1; border: 2px solid black; padding: 10px; text-align: center;"> <p>APR. 17 ,1997 1:37 PM</p> <table border="0"> <tr> <td>Room</td> <td>Company</td> </tr> <tr> <td>E101</td> <td>Applied Eng</td> </tr> <tr> <td>E200</td> <td>United Wire</td> </tr> <tr> <td>W20</td> <td>ACME Tool</td> </tr> <tr> <td>W130</td> <td>Adv Maint</td> </tr> </table> </div> </div>			Room	Company	E101	Applied Eng	E200	United Wire	W20	ACME Tool	W130	Adv Maint
Room	Company											
E101	Applied Eng											
E200	United Wire											
W20	ACME Tool											
W130	Adv Maint											
<p>1</p>	<p>Press PROGRAM. (If PAGE A is not displayed, then press A.)</p>	<div style="border: 2px solid black; padding: 10px; text-align: center;"> <p>PAGE A MODE: [WPDN] SPEED:[SP5]</p> </div>										
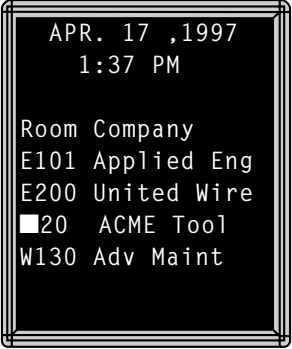
<p>2</p>	<p>Press ADV.</p>	<p>Blinking cursor →</p> <p>Since this continues where the last example, left off, this is what should appear for PAGE A.</p>  <pre> APR. 17 ,1997 1:37 PM Room Company E101 Applied Eng E200 United Wire W20 ACME Tool W130 Adv Maint </pre>
<p>3</p>	<p>Press A.</p>	 <pre> APR. 17 ,1997 1:37 PM Room Company E101 Applied Eng E200 United Wire W20 ACME Tool W130 Adv Maint </pre>
<p>4</p>	<p>Hold down SHIFT and press C until the cursor is over the letter W in W20.</p>	<p>Move the cursor here. →</p>  <pre> APR. 17 ,1997 1:37 PM Room Company E101 Applied Eng E200 United Wire W20 ACME Tool W130 Adv Maint </pre>

5	Hold down SHIFT and press 4 for FLASH.	<p>This entire line should now be flashing. →</p>  <pre> APR. 17 ,1997 1:37 PM Room Company E101 Applied Eng E200 United Wire W20 ACME Tool W130 Adv Maint </pre>
6	Move the cursor to in front of ACME Tool.	<p>Hold down SHIFT and press F to move the cursor. →</p>  <pre> APR. 17 ,1997 1:37 PM Room Company E101 Applied Eng E200 United Wire W20 █ACME Tool W130 Adv Maint </pre>
7	<p>Hold down SHIFT and press 4.</p> <p>This turns flashing off for the rest of the line.</p>	<p>Now the only text flashing should be the room number — W20. →</p>  <pre> APR. 17 ,1997 1:37 PM Room Company E101 Applied Eng E200 United Wire W20 █ACME Tool W130 Adv Maint </pre>

8	Press RUN to see the message.	 <pre>APR. 17 ,1997 1:37 PM Room Company E101 Applied Eng E200 United Wire W20 ACME Tool W130 Adv Maint</pre>
---	--------------------------------------	---

Example 8 — Using fonts and colors

Fonts are the way characters are displayed on a sign. In the world of printing and publishing, fonts are given names like Times or Helvetica and qualities like serif or sans serif, font size (like 12 point or 14 point), bold or italic, etc.

This sign can display two types of fonts:

Upper *and* lowercase letters can be used with this font. —————> This is the first font.


Only upper letters can be used with this font. —————> THIS IS THE SECOND





This is the message we'll create using both of the sign's fonts.








 
 
 
 
 
To change from one font to the other, press the **FONT** key.


The following examples demonstrate how to use fonts on a sign:

Step	When you do this...	You see this...
1	Press PROGRAM . (If PAGE C is not displayed, just press C .) Using SHIFT + 5 , change the MODE to Hold.	

2	Press ADV.	
3	Type in the following message.	
4	Move the cursor in front of the <i>“The potentate</i> Then press FONT.	<p>Pressing FONT → changes the entire line to a different font. (Pressing FONT again would restore the original font.)</p> 
5	Move the cursor in front of the word <i>potentate</i> Press FONT. All the text after the cursor should change to the other font.	<p>The FONT key can be used to change a whole line of text or just a single word.</p> 

6	<p>Press FONT again to make the whole line the same font.</p> <p>Then position the cursor in front of the remaining lines and change the font of each line.</p>	 <p>WELCOME!</p> <p>Hernia Movers "THE POTENTATE OF TOTIN' ■ FREIGHT"</p>
7	<p>Press RUN to see your message.</p>	 <p>WELCOME!</p> <p>Hernia Movers "THE POTENTATE OF TOTIN' FREIGHT"</p>
Here's a demonstration of what colors can be used:		
8	<p>Press PROGRAM.</p> <p>(If PAGE D is not displayed, just press D.)</p> <p>Using SHIFT + 5, change the MODE to Hold.</p>	 <p>PAGE D MODE: [HLD] SPEED: [SP4]</p>
9	<p>Press ADV.</p>	 <p>■</p>

<p>10</p>	<p>Type <i>COLOR 1</i> Then press RETURN</p>	<p>COLOR 1 should be <u>red</u>. →</p>	
<p>11</p>	<p>Press COLOR Type <i>COLOR 2</i> Then press RETURN</p>	<p>COLOR 2 should be <u>red</u>. →</p>	
<p>12</p>	<p>Press COLOR Type <i>COLOR 3</i> Then press RETURN</p>	<p>COLOR 3 should be <u>green</u>. →</p>	
<p>13</p>	<p>Press COLOR Type <i>COLOR 4</i> Then press RETURN</p>	<p>COLOR 4 should be <u>amber</u>. →</p>	
<p>14</p>	<p>Press COLOR Type <i>COLOR 5</i> Then press RETURN</p>	<p>COLOR 5 should be <u>multi-colored</u>. →</p>	
<p>15</p>	<p>Press COLOR Type <i>COLOR 6</i> Then press RETURN</p>	<p>COLOR 6 should be <u>multi-colored</u>. →</p>	

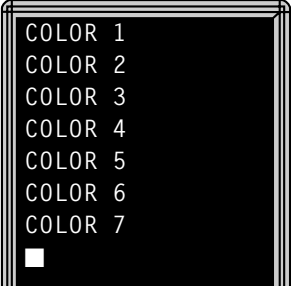16	Press COLOR Type <i>COLOR 7</i> Then press RETURN	<p>Each letter in COLOR 7 → should be a different color.</p>  <pre>COLOR 1 COLOR 2 COLOR 3 COLOR 4 COLOR 5 COLOR 6 COLOR 7 █</pre>
17	Press RUN to see what all the colors will look like.	


Example 9 — International characters

International characters—like ü and é—can be included in messages.

NOTE: International characters can not be used with the small font.

If you try, a question mark (?) will appear in place of the letter.

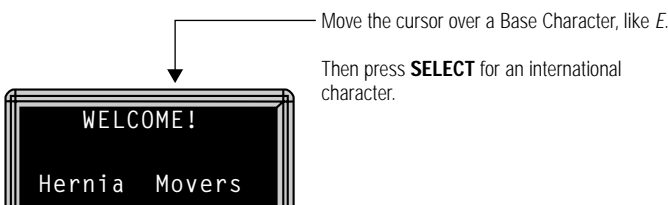


The following table summarizes all the international characters that can be used:

											
Base Characters	(Use the CAPS button on the Remote Control for the lowercase letters.)										
	A	C	E	I	N	O	U	Y	?	!	\$
International Characters	à	Ç	é	ï	ñ	ó	ü	ý	¿	¡	¢
	â	ç	è	ì	Ñ	ô	ù	ÿ	?	!	£
	â	C	è	ì	N	ó	Û	y			¥
	Ä	c	è	l	n	Ö	ú				f
	Ä		É	i		ó	U				\$
	æ		E			ö	u				
	Æ		e			O					
	á					o					
	â										
	À										
a											

Appendixes

Appendix A— Sign diagnostic test

 
Your sign can do a self test to determine if all the LEDs are working properly.

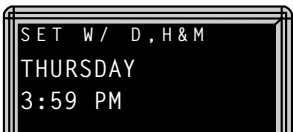Step	When you do this...	You see this...
1	Press PROGRAM .	
2	Press BACK until SET TIME AND DAY appears.	
3	Press ADV .	
4	Type <i>TEST</i>	The sign will go through a series a LED tests until PROGRAM is pressed.
5	Press PROGRAM to exit the self-test mode.	


Quick Reference Card

Message control keys

Not all of the Remote Control keys are used with the ALPHA Solar sign.

	
PROGRAM	To turn the sign on or off, hold down SHIFT and then press PROGRAM . To enter messages, set the date and time, clear memory, etc., press PROGRAM and then BACK until the parameter you want to change is reached. Then press ADV to change the parameter.
RUN	Press twice to exit PROGRAM mode.
APPEND	Not used.
CURSOR	Not used.
SPECIAL	Not used.
FONT	Changes between a small or large font.
WIDTH	Not used.
COLOR	Changes the color of text.

Display modes and special keys

	
ROLL	Not used.
WIPE	Hold down SHIFT and press 2 to use the Wipe mode in a message. Use SELECT to change the direction of the wipe.
SCROLL	Not used.
FLASH	Hold down SHIFT and press 4 to use the Flash mode in a message.
HOLD	Hold down SHIFT and press 5 to use the Hold mode in a message.
ROTATE	Not used.
AUTO	Hold down SHIFT and press 7 to use the Auto mode in a message.
SPEED	Hold down SHIFT and press 8 to use the Speed mode in a message. Use SELECT to set the speed (NHL = slowest, SP5 = fastest).
TIME	Hold down SHIFT and press 9 to include the time in a message.
Date	Hold down SHIFT and press 0 to include the time in a message.